



SF 3 ohm coil driver

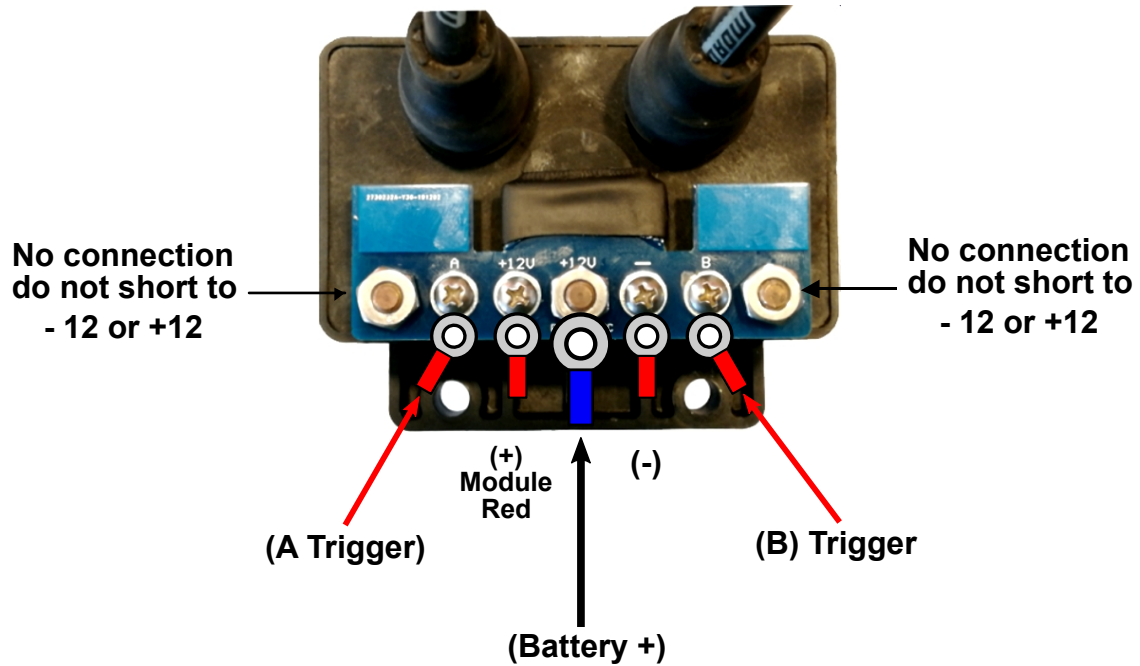

Remove the 3, 10-32 nuts and lock washers from the top of the SF coil terminals and place coil driver board on to coil as shown. Replace the 3, 10-32 nuts and lock washers with existing or new hardware supplied. Use appropriate #6 connectors for making terminations. Do not allow any of the connections to short to each other. See ignition wiring diagrams for wiring.

SF 3 ohm coil driver

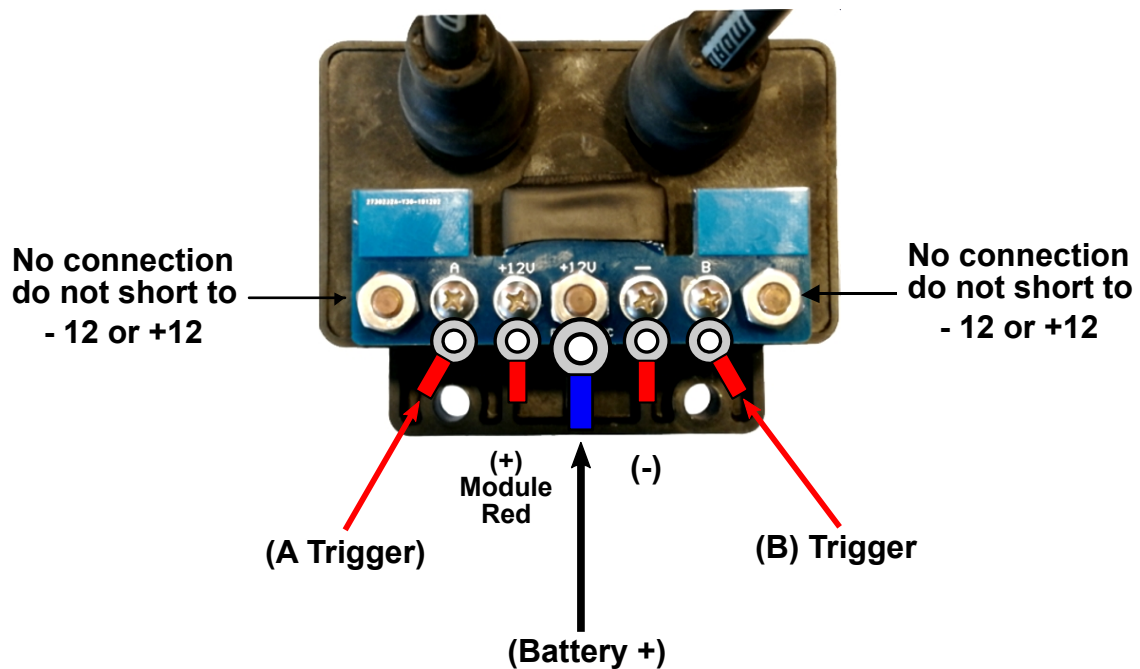

Remove the 3, 10-32 nuts and lock washers from the top of the SF coil terminals and place coil driver board on to coil as shown. Replace the 3, 10-32 nuts and lock washers with existing or new hardware supplied. Use appropriate #6 connectors for making terminations. Do not allow any of the connections to short to each other. See ignition wiring diagrams for wiring.